


电源供电 +12V Power supply +12V  
 信号输入 Signal input  
 信号输出 Signal output  
 接地 GND

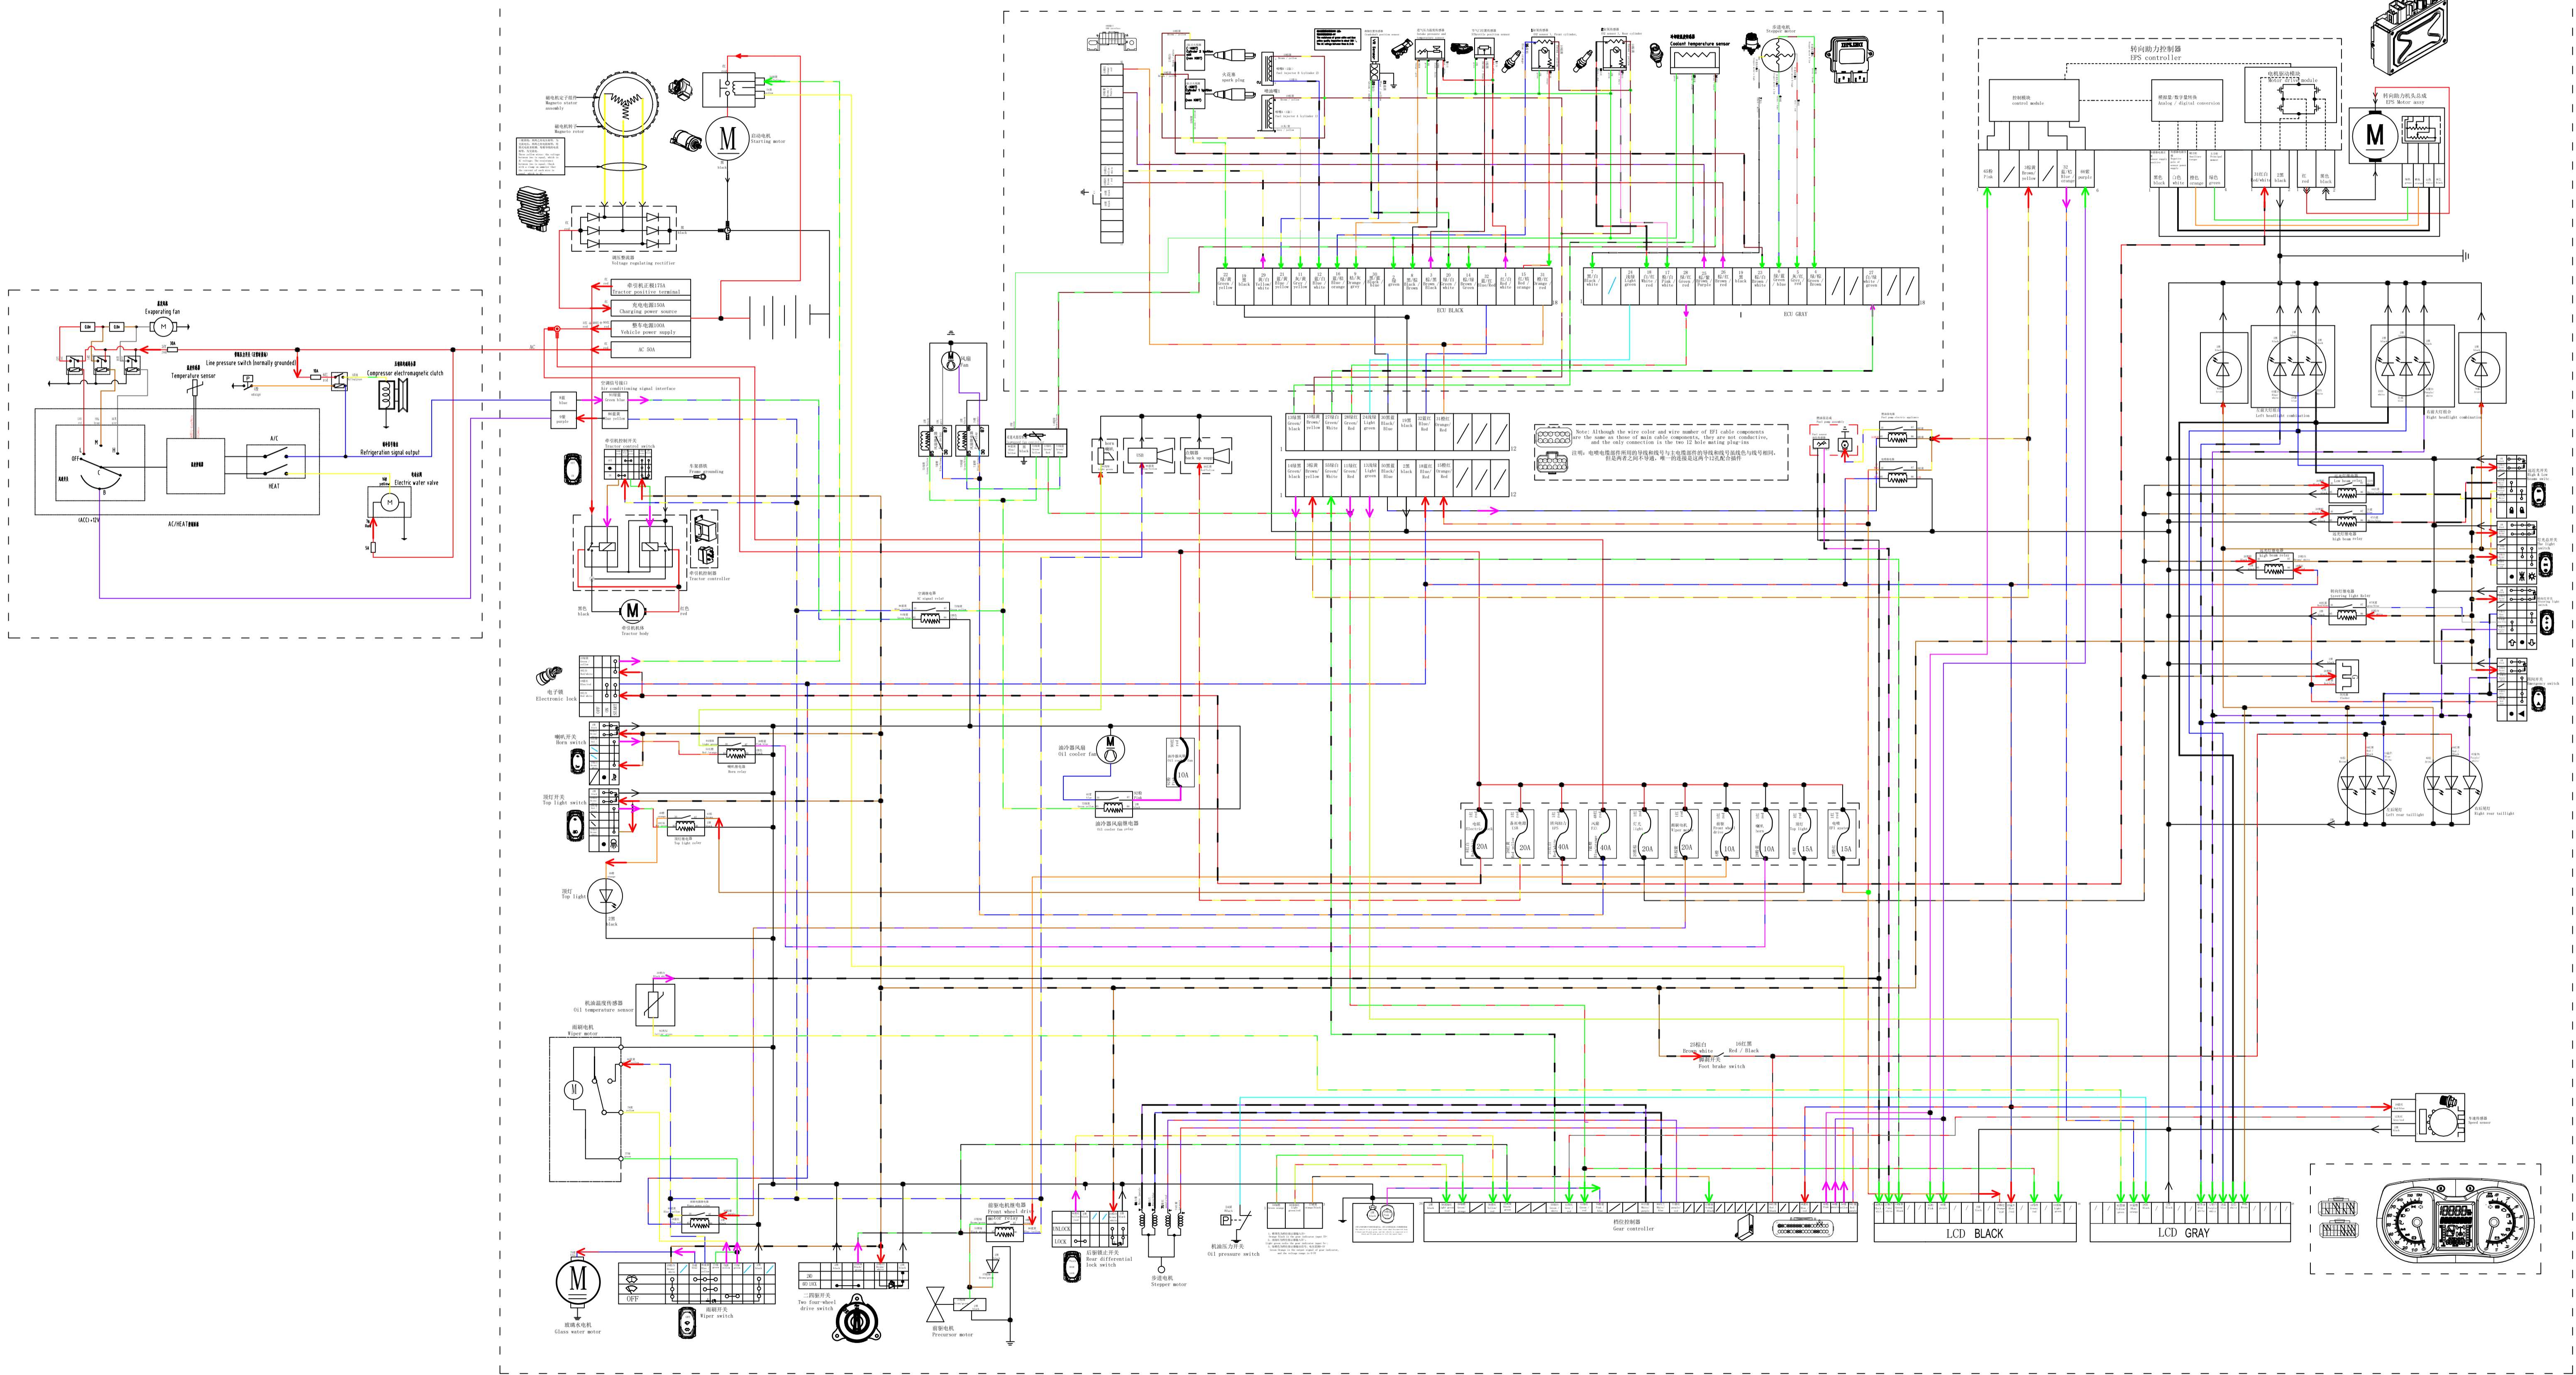

Note: Although the wire color and wire number of ECU components agree, the pins on above all main units supported by this car are not numbered. Note: 此图标注的线色和线号与车上实际线色和线号可能不一致, 请以实际线色和线号为准。

2042白 White 1042黑 Black  
 2042白 White 1042黑 Black  
 熔断器开关 Fuse breaker switch

